


Assembly instruction


Lamoz

Ⓐ clamp big


Ⓑ clamp small

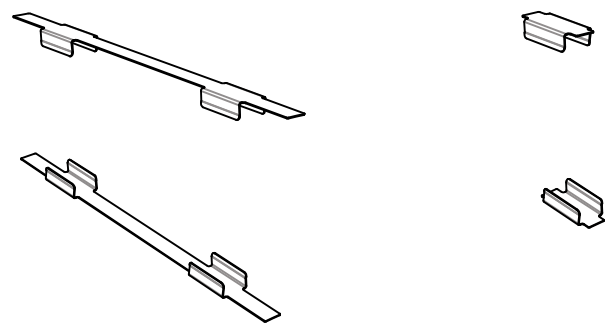


Assembly of 2 seating elements

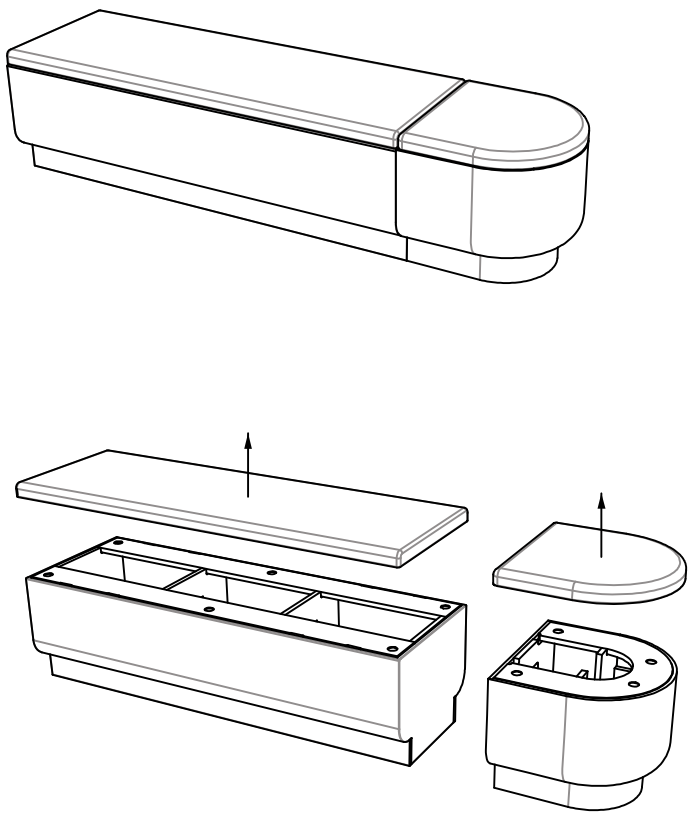


1 - remove upholstered seats (click-connector)

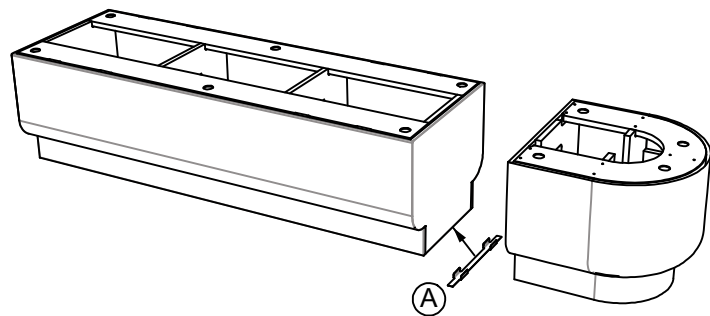

2 - place 1x clamp big under the corpus, narrow side

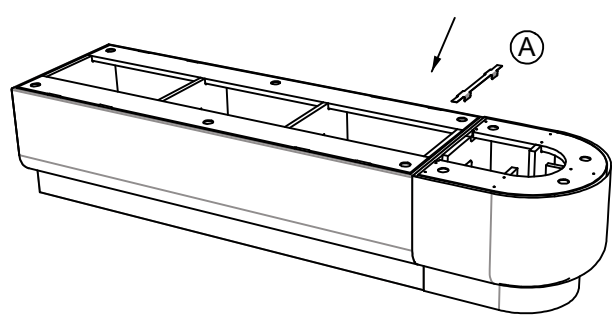


3 - set the second element in the lower clamp
then place 1x clamp big on the upper edge

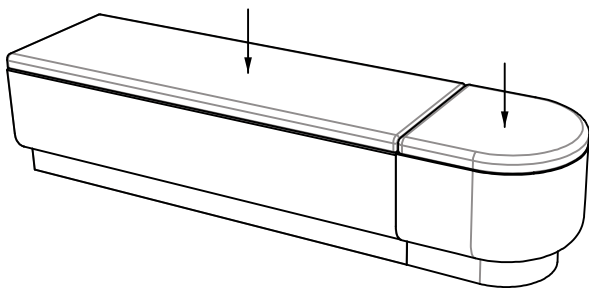


4 - click on the upholstered seats
Ready to use.


Assembly of 1 seating element and a one-sided back wall

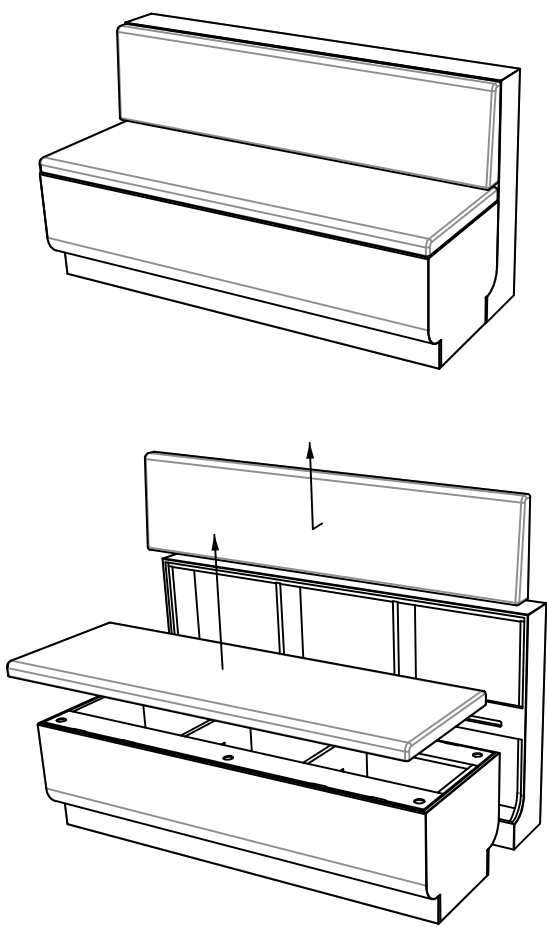


1 - remove upholstered seat+backrest (click-connector)

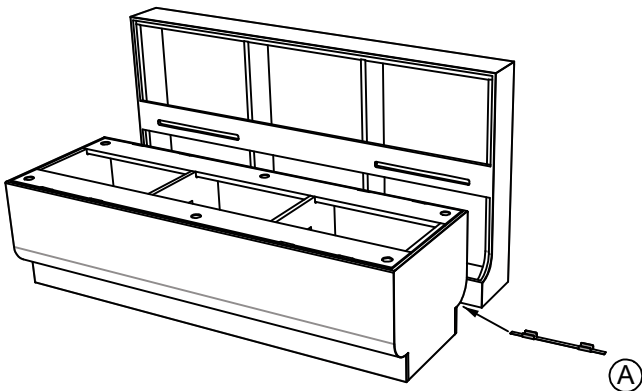

2 - place 2x clamps big under the corpus, long side

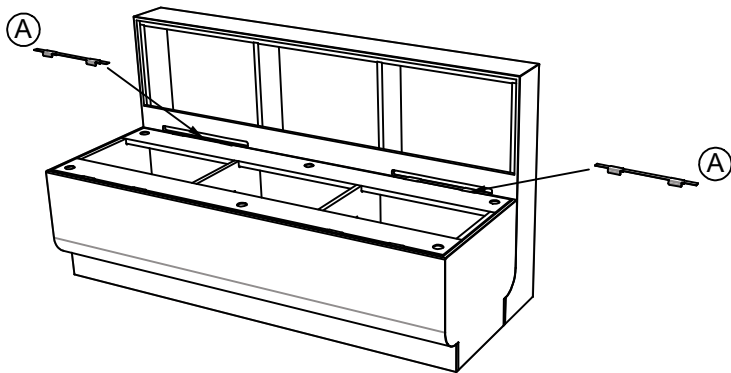


3 - set the seating element in the lower clamps
then place 2x clamp big on the upper edge

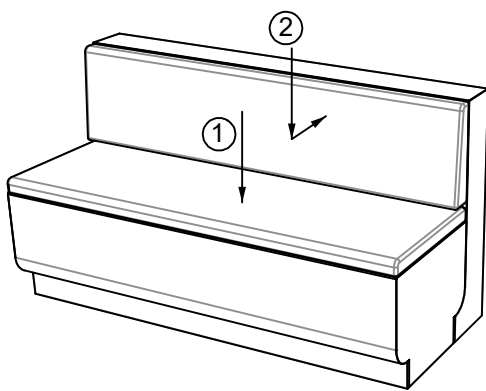


4 - click on the upholstered seat+backrest
Ready to use.


Assembly of 1 curved seating element and a curved back wall

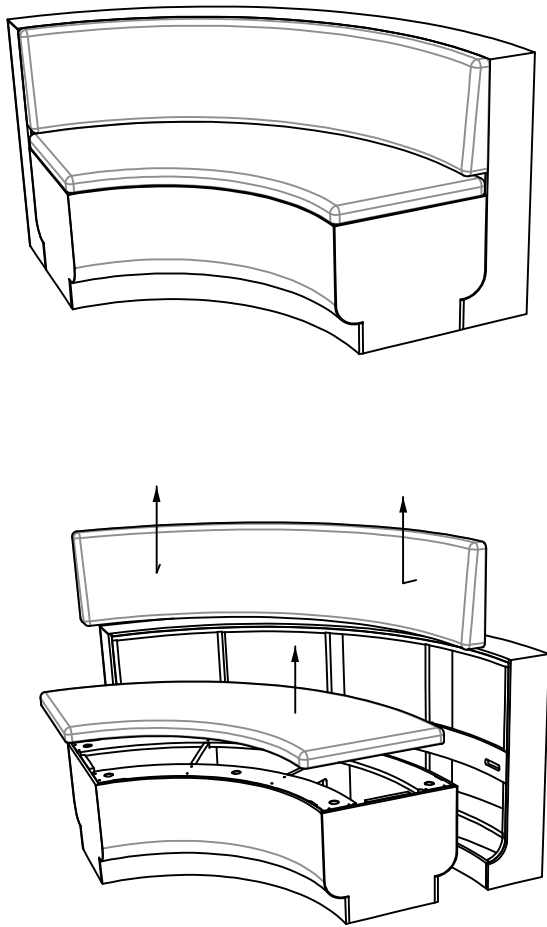


1 - remove upholstered seat+backrest (click-connector)

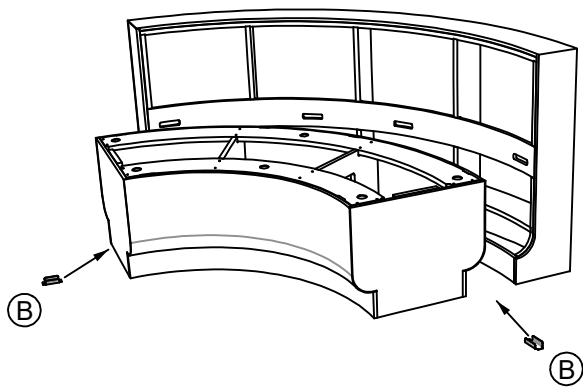

2 - place 4x clamp small under the corpus, long curve side

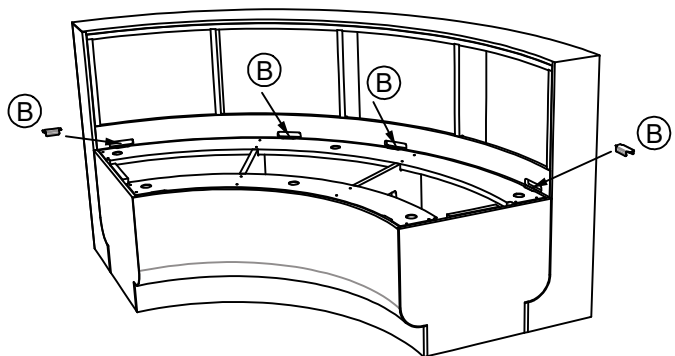

3 - set the seating element in the lower clamps
then place 4x clamp small on the upper edge

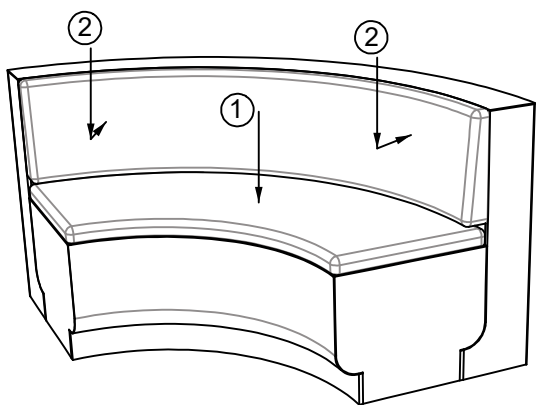

4 - click on the upholstered seat+backrest
Ready to use.